

SUNNY

Instructions Manual

AT-152

Water Filtered
Vacuum Cleaner





- 1- Carrying handle
- 2- Cord rewinding button
- 3- On / off switch
- 4- Suctioning power adjustment buttons (+ / -)
- 5- Suction power LED indicator lights
- 6- Upper cover
- 7- Transparent dust reservoir
- 8- Dust reservoir holding handle
- 9- Filter system
- 10- Hose inlet socket
- 11- Hose
- 12- Telescopic tube
- 13- Cleaning nozzle adjustable according to the floor type
- 14- Narrow nozzle
- 15- Small brush
- 16- HEPA filter part and lid
- 17- HEPA filter and foam filter

We thank you for having selected the **Sunny brand water filtered vacuum cleaner**. We wish this product to make life easier for you, as with other products offered to you.

Your **Sunny Water Filtered Vacuum Cleaner** takes the dust in water and prevents the dust to return to the environment. Your vacuum cleaner is environment friendly and the enemy of the dusts, pollens, dust bugs and allergy. It eliminates the virtually invisible bacteria which may give rise to asthma and allergy and the smallest dust particles and provides a perfect cleaning.

In order to obtain utmost results from your appliance, please **always** read carefully this user's manual and save it for further use.

IMPORTANT SAFEGUARDS


- * Make sure that the voltage indicated on the adaptor of your **Sunny Water Filtered Vacuum Cleaner** corresponds with the main voltage in the place you are. Our company shall not be held liable for any failures owing to any discrepancy and such failures shall not be covered by the guarantee.
- * Your device is for household use only. Do not use outdoors for commercial or industrial purposes. Otherwise, inconvenient uses shall not be covered by the guarantee.
- * This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Make sure that children do not play with your appliance.
- * To prevent harming your appliance do not use extension cords that supply insufficient current.
- * **Always** unplug your appliance from outlet when is not in use and before putting in or taking off any accessories, and before cleaning and maintenance.
- * Do not use harmful chemicals and abrasive cleaners to clean your appliance.
- * **CAUTION: Do not use your appliance for absorbing any flammable liquids such as gasoline, thinner, alcohol, kerosene, etc. as well as abrasive liquids such acids, etc. Do not let your appliance to absorb burning cigarettes, active cigarette ashes or matchsticks.**
- * Ensure not to move the appliance over its cord, which may damage the insulation of the unit.
- * Do not carry your appliance by its cord.
- * To unplug, grasp plug and pull from the power outlet. Never pull the cord.
- * Do not attempt to remove the mains plug when your hands are wet.
- * Do not operate your appliance vertically.
- * Keep away your appliance from direct heat sources as hot stove, burner or in a heated oven.
- * Never immerse your unit into water, and prevent from spilling out any water on the appliance.
- * Hold the plug in your hand while rewinding the cable and prevent the plug to hit the body.
- * Never hold suctioning nozzle near the eyes and ears while operating your appliance.
- * Do not attempt to remove sharp objects such as glasses, etc.
- * Special care is required especially for cleaning the stairs. Be careful mains plug not to be squeezed to the corners, door thresholds, not to be cut and scraped by sharp objects.
- * When plugging in or out make sure that the appliance is switched off.
- * If you are in doubt that the cord or plug is damaged, or that your appliance malfunctions in any manner whatsoever, including dropping down etc. never start up your appliance, nor repair it by yourself. Take it to the nearest Sunny Authorized Service.
- * Contact your Sunny Authorized Service for examination, repair, and spare parts, and use original spares and accessories only.
- * Do not use your appliance without water in the dust reservoir.
- * Use your device for its intended purposes as recommended.

SPECIFICATIONS OF ACCESSORIES OF SUNNY WATER FILTERED VACUUM CLEANER AND THEIR INTENDED USE

* Do not start up your appliance without water in the reservoir and filters.

Fitting and removing the hose:

- * Place the locking hose nozzle on the hose, pushing forward to its socket in nozzle of the hose.
- * In order to remove the hose, firstly unplug the appliance. Pull it towards yourself.

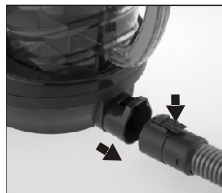


Fitting and removing the telescopic tube and accessories:

- * Place the telescopic tube to the holding handle on the hose nozzle, having air adjustment button. Attach one of the accessories on the nozzle according to place, which you will clean.
- * You can adjust the telescopic tube in desired length. Therefore, adjust the length of the tube by pressing forward adjustment button.



The adjustable carpet/floor brush:

- * It is used for dry cleaning of both hard and soft surfaces. You can clean the hard surfaces when the brush is out, and you can clean the softer surfaces such as carpet etc. when your brush is in. By pressing the switch on the adjustable carpet/floor brush, make the brush inside or outside.

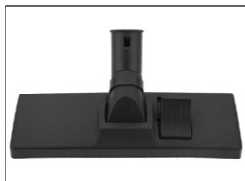

Narrow Nozzle:

- * It is used to clean especially narrow places, which may be difficult to reach, including armchair corners, radiator gaps, wallends and corners, etc.



Small Cleaning Nozzle:

- * It is used in places where the narrow nozzle is not suitable. (upholstery, cloths, beds, etc.)



YOUR APPLIANCE'S SUCTION POWER ADJUSTMENT


Electronic Adjustment of Suction Power

- * You can adjust the suction power of your appliance according to the surface by pushing the + or - buttons. The LED indicators will light according the selected level.



OPERATING YOUR APPLIANCE

- * Firstly remove the dust reservoir by holding the handle.
- * Open the filter lid then fill the dust reservoir with tap water considering the max level. Required quantity is 800 cc (0,8 lt) water. Be careful, the water **never** exceeds the max level.
- * Close the upper cover, but sure that the filter system is on their place. Replace the dust reservoir on its place.
- * Attach the hose to the hose inlet socket.
- * Attach the suitable accessory according to place, which you will clean. Adjust the telescopic tube for the appropriate length.
- * Pull out the electric cable and adjust suitable length and plug your appliance.
- * Start up your appliance by pressing ON-OFF button.
- * There are 4 suction power level on your appliance. You can adjust suction power of your appliance by pushing the + or - buttons according to place, which you clean.

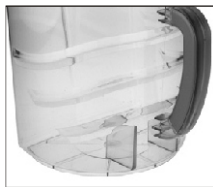

- * It is sufficient to press again the on/off button to finish the vacuum cleaning process.

WARNING:

- * Because your vacuum cleaner is not wet/dry type but water filtered vacuum cleaner, do not use it to absorb water or any other liquid.
- * Never operate your vacuum cleaner without putting water.
- * You can use your appliance to vacuum the dust and a little liquids. If the dirt, collected in the reservoir, reaches the maximum level, security float will stop the suction automatically and sound will occur. Switch off your vacuum cleaner and wait 15 seconds, then operate your appliance again.



CARE AND CLEANING:

- * **Always** unplug your mains cable from the wall socket, before attempting any maintenance or care process.
- * In order to obtain maximum results from your product, discharge dust reservoir after each usage and rinse dust reservoir with cold water. Make sure that reservoir is completely dry before attaching it into its place again.

REMOVING AND DISCHARGING DUST RESERVOIR

* Always unplug your mains cable from the wall socket, before attempting any maintenance or care process.

* For removing the dust reservoir, firstly open the upper cover, then remove the dust reservoir.


* After remove the filter system, then discharge dirty water in the reservoir and rinse the inside of it.



CLEANING THE FILTER SYSTEM (AIR INLET FILTER):

* Remove the L tube and then foam filter from the filter system. Clean them with water and wait to dry. After sure they are completely dry, then remount its place.

* The filter system protects the motor of your appliance. After each use clean the filter system and dry it completely for next usage.

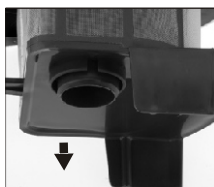

CHANGING HEPA FILTER:



* HEPA filter provides cleaning with better quality for ones, having respiratory disturbances, children and allergic people. HEPA filter is a useful, superior filter.

* The filter which places under your appliance, protect the motor. Open the lid and take off the filter.

* These types of filters must be changed at least once a year and be cleaned at once in four month.

* You can clean HEPA filter with a soft brush as well as you can wash it after cleaning the dust. Make sure that it is completely dry before attaching HEPA filter into its place.

* Also remove the foam filter, clean it. After dry, replace its place.

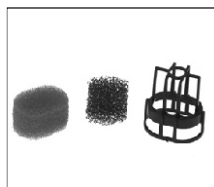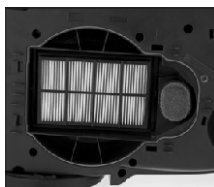

CAUTION !

- * Never wash the filters in the washing machine. Do not use hair drying machine and drying section of washing machine in order to dry it.**
- * After filters are dry, place them into their places. Never use your appliance without any filters.**

IMPORTANT :

In order to change filters apply to Sunny Authorized Service.

Product Life : 10 Years
EN 60335-2-2

Technical Specifications:

220-230V ~ 50 Hz
1800 W
Isolation Class: II

**The product is in compliance with the EEE Directives.
WEEE**

This product contains recyclable materials that compliance with the WEEE directives. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection point.



SUNNY